

Cook Master-P

Pressure Fryer



User Manual

PRODUCT CHARACTERISTICS

The Multi function pressure fryer is an innovative smart cooking appliance that integrates the functions of a pressure cooker, fryer, rice cooker and casserole. The Multi function pressure fryer has become an ideal cooking appliance for modern families

Superior features:







1. A versatile product, which is a combination of frying and stewing functions to cook food.
2. Automatic cooking program with pre-set functions, displayed on the control menu. An alarm sounds when the cooking process is over.
3. Saving energy and time compared to conventional cooking pot.
4. Preserve the nutrients and flavor of the food.
5. Detachable parts, easy to clean.
6. Safety protection modes:
 - The pot does not reach the highest pressure when the pot lid is not closed and the lid cannot be opened when the pressure in the pot is still high.
 - Overpressure function: When the temperature and pressure in the pot exceed the allowable threshold, the pressure valve will automatically release air to relieve pressure.
 - Depressurization function: For safety protection, when the pressure limiting device in the pot does not work and the pressure in the pot exceeds the allowable threshold, all the pressure in the pot will be forced to discharge through the outlet. steam at the edge of the lid.
 - Overheat protection function: When the temperature in the pot exceeds the allowable threshold, the pot will automatically power off.


PRODUCT SPECIFICATIONS

Model	
Rated voltage	220-240V~, 50-60Hz
Rated power	Electric pressure cooker: 800W
Rated power	Air fry pot: 1200W
Capacity	4.0 L
Electric pressure cooker	0~70KPa

PRODUCT INTRODUCTION

1. Handle
2. Upper cover of air fry pot
3. Operating panel
4. Base
5. Halogen tube
6. Fan blade
7. Protective net
8. Coupler
9. Grill
10. Vent hole
11. Exhaust button
12. Handle
13. Pressure cooker
14. Temperature measuring rod
15. Bleed pipe assembly
16. Float valve assembly
17. Inner container
18. Supporting rib
19. Table top

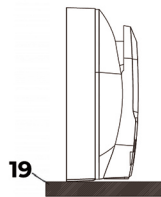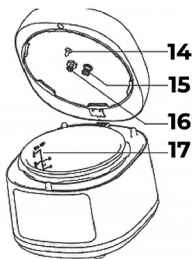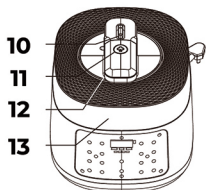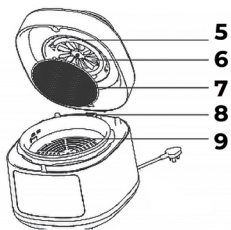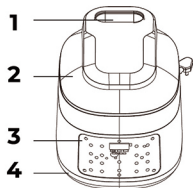

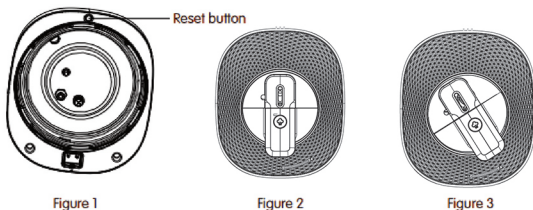

When using with the cover opened, if the upper cover falls or the reset button is touched by mistake, the rotation of the upper cover handle cannot reach the "mark of the cover opened in place," resulting in the inability to close the cover. As shown in Fig. 1, the user only needs to manually press and hold the re-set button to the bottom, rotate the upper cover handle counterclockwise at the same time to the "mark of the cover opened in place" (see Fig. 2 and Fig. 3) and then release the reset button.

Make sure that the handle of the upper cover is at the "mark of the cover opened in place," buckle the upper cover, hold the handle and rotate clockwise to the "mark of the cover opened in place," and select the function program to continue cooking.

Keep the shading hole clean and not blocked by foreign matters.

Do not spray with water to avoid machine failure caused by water inflow.

SAFETY MANUAL

1. Do not use the Pressure Fryer in a flammable or humid environment.
2. Use the Pressure Fryer exactly according to the instruction manual
3. Do not damage the rubber seal or replace it with another rubber ring.
4. Do not remove the gasket inside the cover. If the gasket falls off the cap, stop

using it and replace it with another one

5. Do not replace the pressure regulator valve with another object or place anything on it to increase the weight.
6. Keep the surface between the inner pot and the heating plate clean. Do not use the inner pot for cooking on other stoves, or substitute another inner pot for use with the pressure cooker.
7. The pot is covered with non-stick coating; Therefore, it is recommended to use a wooden spoon or a plastic spoon so as not to scratch the non-stick coating.
8. Keeping hot for more than 6 hours can affect the taste of food.
9. If too much steam escapes around the lid during cooking, it is not normal. At this time, the pressure relief device is operating. Please disconnect the power immediately and take it to a service center for repair.
10. If there is any problem, stop using it and take it to a service center for repair.
11. Do not arbitrarily disassemble the pot. When replacement parts are required, genuine spare parts should be used.
12. If the power cord is damaged, it must be replaced with an original or authorized service center.
13. Do not hold the power cord to pull the plug out of the socket, to avoid damage to the power cord.
14. Do not immerse the fryer pressure cooker in water.
15. Pressure relief valves (pipes inside safety valves, float valves and floats) must be checked regularly to ensure that they are not clogged.
16. If the power cord is damaged, contact the manufacturer or an authorized service center for replacement. Do not arbitrarily replace, to avoid problems.
17. Do not allow people with disabilities and children to use the pressure cooker, unless supervised and responsible for their safety.
18. Do not allow children to play with this appliance.

WARNING

1. Do not bring your hands and face near the steam vent when discharging the valve.
2. Do not touch the pot lid while it is hot to avoid burns.
3. Cloth should not be used to seal the connection between the lid and the inner pot to avoid danger.
4. Do not use force to open the lid when there is still pressure in the pot to avoid accidents. Only open the pot when the pressure has dropped sufficiently (when the float valve lowers).
5. After cooking, disconnect the power before opening the lid
6. Do not open the lid while the water is boiling.
7. Do not cook acidic food (with pH less than 5) using the pressure function.
8. When baking acidic ingredients with pH less than 5 (e.g., sauces such as lemon juice or vinegar), be sure to wrap them in foil.
- 9 . Both inner pot coating and rack coating cannot contact acid for long time, otherwise there is risk of coating peel off.

USER MANUAL

Pressure cooker function

1. When you need cook rice, Measure the rice using the supplied measuring cup. use the correct way, like the pictures:

Correct




Wrong




2. Add water

Remove the inner pot, pour the food and water in. Food and water should not occupy more than $\frac{4}{5}$ the volume of the pot or less than $\frac{1}{5}$ of the volume of the pot. For foods with large expansion, the volume of food and water should not exceed $\frac{3}{5}$ of the volume of the inner pot




3. Check that the product gasket is properly attached to the pot lid. Gaskets are required to be properly mounted.

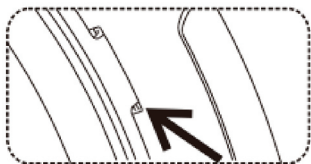


4. Before using the new machine, please clean the inner and outer surfaces of the inner container with warm water and detergent and dry after cleaning.

5. Open the lid: Grasp the handle on the lid and turn the lid counterclockwise to the open position, then lift the lid (Pictures 1, 2).

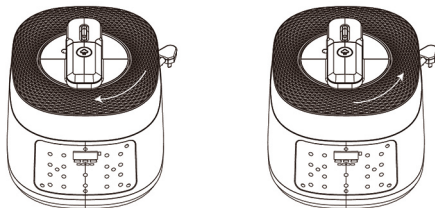

Open the cover: make sure that the float falls down, hold the handle of the upper cover tightly with one hand, rotate to the unlocking position in the direction of opening the cover and then lift the upper cover upward; rotate in the opposite direction to close the cover.

6. Check float and bleed valve

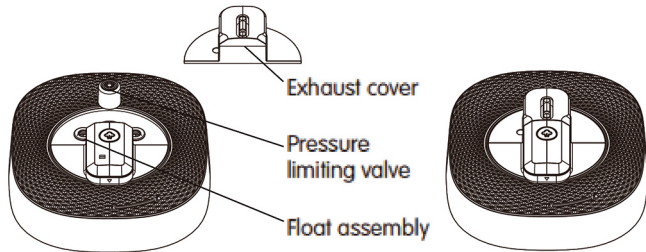


Air fry function

1. Place the grill in the inner container



2. Place food: properly place the food on the grill and make sure that the food does not exceed the height of the inner container

3. Place the air fry cover

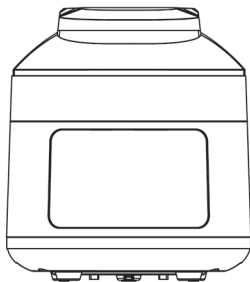


4. Determine the space: Enough space should be reserved around the product to ensure that the distance between the surface and other articles is at least 10cm and no articles can be placed at the outlet, and place the product on a smooth surface.

5. Please note that for the first time when you use it, you may smell a peculiar smell, which is a normal phenomenon, not a failure of the product. When using the air fry cover for the first time, it is recommended not to place food in the pot, select the "DIY" function, set 200 °C for 5 minutes and dry burn for one cycle.

PRESSURE COOKER MODE INSTRUCTIONS FOR USE

Step 1: Place the food in the pot.



Step 2: Cover the pressure cooker lid and close the lid by rotating it clockwise.

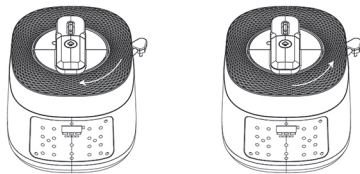

At this point, the buttons for the functions of the pressure cooker will light up with indicators.

Choose the function:

In the standby mode, press the left pressure cooker function button Or the **"Characteristic Function"** button to enter the function selection mode and the digital tube is normally on to display [Cooking Time of the Corresponding Function]; the corresponding function lamp flashes. Pressure cooker have 2 Characteristic function for your choose, Characteristic function : **"Preheat"** and **"Porridge"**

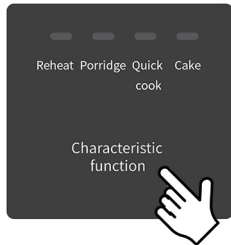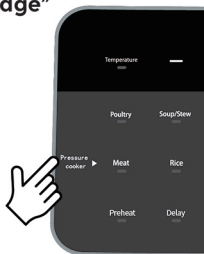

Step 3: Select the function and click the function button.

Step 4: Adjust the time.



In the function selection state, directly press "+" or "-" to adjust the time. The digital tube flashes and displays [Cooking Time of the Corresponding Function]; In the function selection state, press the **"Time Adjustment"** key to enter the time adjustment; at this time, press "+" or "-" to adjust the time, and the digital tube flashes and displays [Cooking Time of the Corresponding Function]; The corresponding function lamp flashes. "Approximate Remaining Time" flashes. The time is adjusted by 1 minute each time and quickly adjusted by 5 minutes per long press.

Step 5: Click on the **"Start"** button and the machine will start working.



Hold to Cancel

Step 6: When the machine is finished cooking, it will sound and you can turn the lid counterclockwise, open it and enjoy the meal. (When the lid of the pressure cooker is turned counterclockwise, the machine will sound. When the lid is taken off, there is a sound.)

When the machine is working, Long press the "Start/Cancel" Button for 2 seconds to stop working and the machine enters standby mode.

Description of the pressure :

After the appointment is over or the work is started directly without an appointment, the machine will enter the pressure holding mode after heating to the set pressure. The display shows the count down of keeps pressure time. The corresponding function light is always on.

At the end of the pressure holding, enter the step-down stage, and the display screen shows the pressure "**P****" (This represents the pressure value in the pot), corresponding to the functional light is always on.



Long press the "**Start/Cancel**" button, the machine enters the standby mode, the display shows "**-- : --**"

Heat preservation/cancellation

After the end of the step-down, the machine will automatically enter the heat preservation, and the digital tube on the right side shows "**b**". Maintain the temperature of the food in the pot at 60-80 °C.



PRESSURE COOKER BUTTON DESCRIPTION

Delay Timer function:

- 1.First, you can click the food function you need to make a reservation,
- 2.then click the reservation button,
- 3.Adjust the time you need to make a reservation,
- 4.Click start, after the start will sound 3 times, the machine starts to work. When working, the screen will light up the time and the selected function button. Click **"Cancel"**, and the machine stops working, at this time you can also readjust the desired appointment time.



Please note:

When the function of the food support make an appointment, the indicator of the appointment button will light up and can be clicked.

When the function of food does not support reservation, the indicator light of reservation does not light up.

Preheating function:

click the preheating button, you can adjust the time by plus and minus signs. If you click the preheat button again, it will return to the default time. Click Start, the machine starts to work, the screen will show the running icon, start scrolling icon.

Note: The **"Preheat"** function under the pressure cooker function is a fast cooking program, It can be used to preheat food with recipes.



Quick Cook:

This function is supported with the lid of the pot open.

When the pressure cooker is opened, the other function keys do not light up, there is a horizontal line on the screen, but the **"quick cook"** function will light up and the light will be on. When you need to use the quick cook function, you can click on the **"Characteristic Function"** button to select the quick cook function, that is open lid cooking function, and then you can also adjust the time.

Finally, click the start button, the machine began to work. It will sound three times when it starts working. Quick cook, Open lid cooking time is up to 1 hour can be controlled, the minimum is 1 minute.

Reheat and Porridge functions:

1. Click the **"Characteristic Function"** button,
2. Select the function according to your needs,
3. Click the Start button, and the machine starts to work

Rice function:

1. When you choose rice function, the default is 20 minutes, click **"Start"** to work, and then the display will have a rotating line, is working.



2. When the machine works for the last 10 minutes, the display will display 10, it will continue to work and continue to count down.

3. When the machine enters the step-down, the **"P"** pressure value will be displayed, and the pressure value will begin to count back. At this time, the cover cannot be opened.



4. When the pressure value is counted down to “P 00”, the machine is finished cooking. “b” will be displayed, and the machine will have a prompt sound. At this time, you can open the lid and enjoy the food.



AIR FRY FUNCTION/OPERATING INSTRUCTION:

Step 1: Place the grill and place the grill in the liner. Place the food in the pot.



Step 2: Put the air fry pot cover, and the air fry function button light will be on.



Determine the space, the product should be reserved around the space, to ensure that the surface to other objects at least 10cm distance, air outlet Do not place any items, place the product on a smooth surface.

Note : When the first use, may smell peculiar smell, this is a normal phenomenon, not product failure. When using the Air fryer for the first time, it is recommended that no food is placed in the pot. We recommended to choose the **"DIY"** function, set at 200 ° C for 5 minutes, and dry burning for a cycle.

Step 3: Choose the function

In the standby mode, press the right air fry function button or the "**Characteristic Function**" button to enter the function selection mode, and the digital tube flashes and displays [Cooking of Corresponding Function]; The corresponding function lamp flashes.

Air fryer have 2 Extra function for your choose, Extra Function: "**Reheat**" and "**Cake**" Functions.

Step 4: Time/temperature adjustment

In the function selection state, press the "**Time Adjustment**" button to enter the time adjustment; At this time, press "+" or "-" to adjust the time and the digital tube displays [Cooking Time of the Corresponding Function];

- In the function selection state, press the "**Temperature Adjustment**" button enter the temperature adjustment; At this time, press "+" or "-" to adjust the temperature, and the digital tube displays the [Cooking Temperature of the Corresponding Function] C and the icon lights up;

- Time adjustment: the digital tube displays [Cooking Time], and the time is adjusted by 1 minute per short press and quickly adjusted by 5 minutes per long press. The corresponding function lamp flashes.

- Temperature adjustment: The digital tube displays [Cooking Temperature], and the temperature is adjusted by 1°C per short press and quickly adjusted by 5°C per long press. The corresponding function lamp flashes.

Step 5: Click on the "**Start**" button and the machine will start working. The machine will automatically count down according to the default time, and the display will show the time.



Step 6: When the machine is finished cooking, it will sound and you can open lid. and enjoy the meal.

The digital tube displays [Remaining Time], the corresponding function lamp is normally on.

In the process of working, when you open the Air fryer lid, the display shows [static block diagram].



The machine enters the pause state, the countdown time stops, and after placing the lid back again, the machine will continue to work after placing the lid back again.

Note: If the lid is lifted during the working process, the temperature of the handle of the lid may be too high, pay attention to avoid burning.

● After the countdown, when the temperature in the pot is greater than 150°C, the digital tube shows “COOL”. The corresponding function light is always on.



● After cooling, the digital tube shows “End”, the corresponding function light is always on. At this point, the cooking is done. You can lift the lid and enjoy your meal.



	Fault phenomenon	Cause of failure	Treatment
1	It is difficult to close the pressure cover	Sealing ring is not in place	Place the sealing ring well
2	It is difficult to close the pressure cover	The float does not fall after deflation	There is pressure in the pot
3	The pressure cover leaks	There is pressure in the pot	Wait until the pressure drops and the float falls before opening the cover
		There is pressure in the pot	Check whether the seal ring is placed as required
		The seal ring is stuck with food waste	Clean the sealing ring
		Seal ring is worn	Send to the maintenance point for repair
4	Air leakage of the float	The float seal ring is stuck with food waste	Clean the sealing ring
		Seal ring is worn	Replace the float seal ring
5	The float cannot rise	Too little food and water in the pot	Put the proper amount of food and water, as required
		Air leakage of upper cover or pressure limiting bleed valve	Send it to after-sales service department for maintenance
6	Display screen doesn't light up when powered on	Poor contact of power socket	Please check the power socket
		Fuse protector is broken	Send it to after-sales service department for maintenance
7	The digital tube shows E1	The bottom temperature sensor is open-circuited	Send it to after-sales service department for maintenance
8	The digital tube shows E2	The bottom temperature sensor gets short-circuited	Send it to after-sales service department for maintenance

9	The digital tube shows E4	The temperature at the top is too high	Remove the upper cover after power failure to cool
10	The digital tube shows E7	The cover is not in place during work	Recoverable after proper cover placement
11	The digital tube shows E8	The grid voltage is too high.	It will recover after the grid voltage is stable.
12	The digital tube shows E9	The grid voltage is too low	It will recover after the grid voltage is stable.
13	The digital tube shows E11	Pressure cooker-long-time air leakage without pressure	Send it to after-sales service department for maintenance
		Air fry-not up to set temperature	Send it to after-sales service department for maintenance
14	Digital tube displays Pot	The inner container is not in place	Recoverable after placing the inner container

CLEANING AND MAINTENANCE

1. Unplug the power plug before cleaning.
2. Clean the heating plate with a soft cloth.
3. Remove and clean the drip tray.
4. Clean the rubber gasket on the cap, anti-scale cap, pressure relief valve and float valve.
5. Clean the inner pot with a sponge or soft cloth.

ATTENTION

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
2. Children being supervised not to play with the appliance.
3. The instructions state that the appliances are not intended to be operated by means of an external timer or separate remote-control system.
4. This appliances is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and others working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
5. The appliance must not be immersed.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Please keep instructions for future reference.





Cook Master-P

Basınçlı Pişirici



Kullanım Kılavuzu

ÜRÜN ÖZELLİKLERİ

Çok fonksiyonlu Smartmi Cook Master-P Basıncılı Pişirici, birden çok pişirme fonksiyonunu entegre eden yenilikçi bir akıllı pişirme cihazıdır. Çok fonksiyonlu basınçlı fritöz, modern aileler için ideal bir pişirme cihazıdır.

Gelişmiş Özellikler:






1. Yemek pişirmek için pişirme ve haşlama işlevlerinin bir arada olduğu çok yönlü bir urundur.
2. Kontrol menüsünde görüntülenen, önceden ayarlanmış fonksiyonlara sahip otomatik pişirme programları bulunur. Pişirme işlemi bittiğinde bir alarm çalar.
3. Geleneksel pişirme yöntemlerine kıyasla enerji ve zaman tasarrufu sağlar.
4. Yiyeceklerin besin değerlerini ve lezzetini korur.
5. Sökülebilir parçaları sayesinde temizlenmesi kolaydır.
6. Güvenlik koruma modları:
 - Tencere kapağı kapatılmadığında, tencere en yüksek basınca ulaşmaz ve tenceredeki basınç hala yüksekken kapak açılmaz.
 - Aşırı basınç fonksiyonu: Tenceredeki sıcaklık ve basınç izin verilen eşiği aştığında, basınç valfi basıncı tahliye etmek için otomatik olarak havayı serbest bırakır.
 - Basıncısızlaştırma işlevi: Uzak güvenlik koruması, tenceredeki basınç sınırlama cihazı çalışmadığında ve tenceredeki basınç izin verilen eşiği aştığında, tenceredeki tüm basınç çıkıştan boşaltılacaktır.
 - Aşırı ısınmaya karşı koruma fonksiyonu: Tenceredeki sıcaklık izin verilen eşiği aştığında, tencere otomatik olarak kapanacaktır.


ÜRÜN ÖZELLİKLERİ

Model	
Anma gerilimi	220-240V~, 50-60Hz
Anma gucu	Electric pressure cooker: 800W
Anma gucu	Air fry pot: 1200W
Kapasite	4.0 L
Elektrikli basınçlı pişirici	0~70KPa

ÜRÜN TANITIMI

1. Tutma kolu
2. Üst kapak
3. Kullanım ekranı
4. Zemin
5. Halojen tüp
6. Vantilatör kanadı
7. Koruyucu ağ
8. Bağlayıcı
9. Izgara
10. Havalandırma deliği
11. Hava çıkışı düğmesi
12. Tutma kolu
13. B aşınçlı pişirici kısım
14. Sıcaklık ölçüm çubuğu
15. Hava alma borusu tertibatı
16. Şamandıra valfi tertibatı
17. İç hazne
18. Destekleyici pervaz
19. Masa üstü

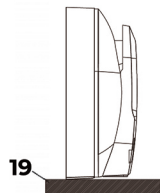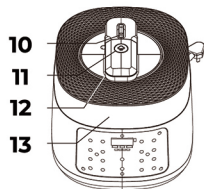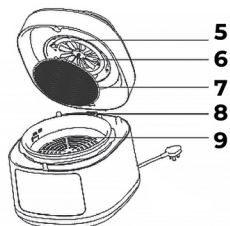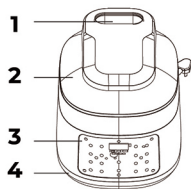

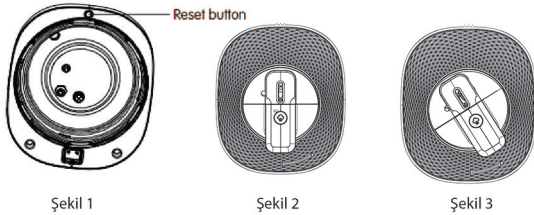

Kapak açıkken kullanırken, yanlışlıkla üst kapak düşerse veya sıfırlama düğmesine dokunulursa, üst kapak tutamağının dönüşü "kapak yerinde açıldı işareti" ulaşamaz, bu da kapağın kapatılmamasına neden olur. Şekil 1'de gösterildiği gibi, kullanıcının yalnızca yeniden ayar düğmesini alta manuel olarak basması ve tutması, üst kapak tutamağını aynı anda "kapak yerinde açılmış işareti" kadar saat yönünün tersine döndürmesi gerekir (bkz. 2 ve Şekil 3) ve ardından sıfırlama düğmesini bırakmalıdır. Üst kapağın tutamacının "kapak yerine açılan işareti" olduğundan emin olun, üst kapağı tokalayın, kolu tutun ve "yerinde açılan kapağın işareti"ne kadar saat yönünde döndürün ve fonksiyon programını seçin. Pişirmeye devam etmek için. Gölgeleme deliğini temiz tutun ve yabancı maddeler tarafından engellenmeyin. Su girişinin neden olduğu makine arızasını önlemek için su püskürtmeyin.

GÜVENLİK KLAVUZU

1. Fritözü yanıcı veya nemli bir ortamda kullanmayın.
2. Fritözü tam olarak talimat kılavuzuna göre kullanın
3. Lastik contaya zarar vermeyin veya başka bir lastik halka ile değiştirmeyin.
4. Kapağın içindeki contayı çıkarmayın. Conta kapaktan düşerse, kullanmayı bırakın ve yenisiyle değiştirin.

5. Basınç regülatör valfini başka bir nesne ile değiştirmeyin. Ağırlığı artırmak için üzerine herhangi bir şey koymayın.
6. İç kap ile ısıtma plakası arasındaki yüzeyi temiz tutun. İç kabın yerine başka bir tencere veya kap kullanmayın. İç kabı yemek pişirmek için ocak üzerinde kullanmayın.
7. Tencere yapışmaz kaplama ile kaplanmıştır. Yapışmaz kaplamayı çizmemek için tahta kaşık veya plastik kaşık kullanılması tavsiye edilir.
8. İçerisinde 6 saatten fazla yiyecek tutmak pişirilen yemeğin tadını etkileyebilir.
9. Pişirme sırasında kapağın çevresinden çok fazla buhar çıkıyorsa bu normal değildir. Bu basınç tahliye cihazının çalıştığını gösterir. Böyle bir durumda gücü kesin ve onarım için bir servis merkezine götürün.
10. Herhangi bir sorun halinde kullanmayı bırakın ve onarım için bir servis merkezine götürün.
11. Tencereyi keyfi olarak sökmeyin. Yedek parça gerektiğinde, orijinal yedek parçalar kullanılmalıdır.
12. Güç kablosu hasarlıysa, yetkili servis merkezinde orijinali ile değiştirilmesini sağlayın.
13. Güç kablosunun zarar görmemesi için, prizden çekerken güç kablosunu tutmayın.
14. Basınçlı fritözü suya batırmayın.
15. Basınç tahliye vanaları (emniyet vanaları, şamandıralar ve şamandıralar içindeki borular) tıkalı olmadıklarından emin olmak için düzenli olarak kontrol edilmelidir.
16. Güç kablosu hasarlıysa, değiştirilmesi için üreticiyle veya yetkili servis merkeziyle iletişime geçin. Sorunları önlemek için keyfi olarak değiştirmeyin.
17. Gözetim altında olmadıkça ve güvenliklerinden emin olmadıkça, engelliler ve çocukların ürünü kullanmasına izin vermeyin.
18. Çocukların bu aplikasyonla oynamasına izin vermeyin.


UYARILAR

1. Pişiriciyi boşaltırken ellerinizi ve yüzünüzü buhar çıkışına yaklaştırmayın.
2. Yanıkları önlemek için tencere kapağına dokunmayın.
3. Tehlikeyi önlemek amaçlı, kapak ile iç tencere arasındaki bağlantıyı kapatmak için bez kullanılmamalıdır.
4. Kazaları önlemek için tencerede hala basınç varken kapağı zorla açmayınız. Tencereyi sadece basınç yeterince düştüğünde açın (şamandıra valfi düştüğünde).
5. Pişirdikten sonra, kapağı açmadan önce gucu kesin.
6. Su kaynakarken kapağı açmayın.

KULLANIM KILAVUZU


Basıncılı Pişirici Fonksiyonları

1. Verilen ölçü kabını kullanarak pirinci ölçün




2. Su Ekleyin

İç tencereyi çıkarın, içine yiyecek ve suyu dökün. Yiyecek ve su, tencerenin hacminin 4/5'inden fazlasını veya tencerenin hacminin 7/5'inden azını işgal etmemelidir.




3. Ürün contasının tencere kapağına düzgün takıldığını kontrol edin. Contaların uygun şekilde monte edilmesi gerekir.

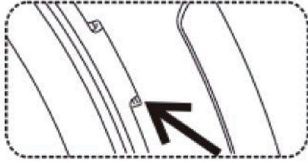


4. Yeni makineyi kullanmadan önce lütfen iç kabın iç ve dış yüzeylerini ılık su ve deterjanla temizleyiniz ve temizledikten sonra kurulayınız.

5. Kapağı açın: Kapaktaki kolu kavrayın ve kapağı saat yönünün tersine açık konuma çevirin, ardından kapağı kaldırın (Resim 7, 2).

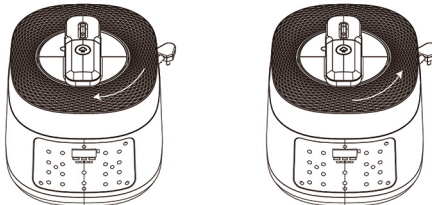

Kapağı açın: şamandıranın aşağıda olduğundan emin olun, bir elinizle üst kapağın tutamağını sıkıca tutun, kapağı açma yönünde kilit açma konumuna çevirin ve ardından üst kapağı yukarı kaldırın; kapağı kapatmak için ters yönde döndürün.

6. Şamandıra ve boşaltma valfini kontrol edin.

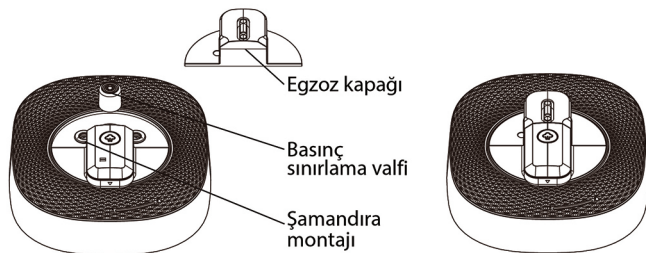


AirFry Özelliği

1. AirFry ızgarasını iç kaba yerleştirin.



2. Yiyecekleri yerleřtirin: yiyecekleri ızgaraya duřgun řekilde yerleřtirin ve yiyeceklerin i kabın yukseklięini ařmadıęından emin olun
3. Air Fry kapaęını yerleřtirin

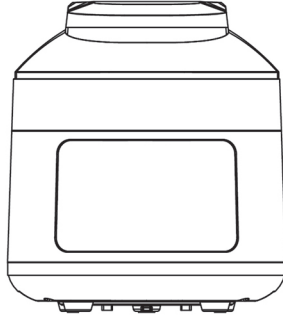

4. Bořluęu belirleyin: Yuzey ile dięer nesnelere arasındaki mesafenin en az 70 cm olmasını ve ıkıřa hibir nesnenin yerleřtirilemeyeceęinden emin olmak iin urunun evresinde yeterli bořluk bırakılmalı ve urun purluzsuz bir yuzeyde olmalı.
5. Lutfen ilk kez kullandıęınızda, tuhaf bir koku duyabileceęinizi unutmayın. Bu bir urun arızası deęil, yeni bir urunde olabilecek bir kokudur. Air fryer kapaęını ilk kez kullanırken, tencereye yiyecek koymamanız, "DIY" fonksiyonunu semeniz, 200 °C'yi 5 dakika ayarlamanız ve bir sure alıřtırmanız önerilir.

KULLANIM TALİMATLARI

Basınçlı Pişirme Özelliği

Basınçlı pişiricinin kapağını taktığınızda basınç fonksiyonu düğmesi ışığı yanacaktır.

1- Özelliği Seçin

Bekleme modunda, fonksiyon seçim moduna girmek için basınçlı pişirici fonksiyon butonuna veya "Karakteristik Fonksiyon" butonuna basın ve dijital tüp [İlgili Fonksiyonun Pişirme Süresi]'ni gösterir; ilgili fonksiyon lambası yanıp söner.



2- Zaman Ayarı

Fonksiyon seçimi durumunda, zamanı ayarlamak için doğrudan "+" veya "-" tuşlarına basın. Dijital tüp yanıp söner ve [İlgili Fonksiyonun Pişirme Süresi]'ni görüntüler; fonksiyon seçimi durumunda, zaman ayarını girmek için "Zaman Ayarı" tuşuna basın; zamanı ayarlamak için "+" veya "-" düğmesine basın ve dijital tüp yanıp söner ve [İlgili Fonksiyonun Pişirme Süresi]'ni görüntüler.

Zaman, her seferinde 1 dakika olarak ayarlanır ve her uzun basışta 5 dakika hızla ayarlanır.



Zaman Ayarı

Fonksiyon seçimi durumunda, zamanı ayarlamak için doğrudan "+" veya "-" tuşlarına basın. Dijital tüp yanıp söner ve [İlgili Fonksiyonun Pişirme Süresi]'ni görüntüler; fonksiyon seçimi durumunda, zaman ayarını girmek için "Zaman Ayarı" tuşuna basın; şu anda, zamanı ayarlamak için "+" veya "-" düğmesine basın ve dijital tüp yanıp söner ve [İlgili Fonksiyonun Pişirme Süresi]'ni görüntüler; ilgili fonksiyon lambası yanıp söner. "Yaklaşık Kalan Süre" yanıp söner. Zaman, her seferinde 1 dakika olarak ayarlanır ve her uzun basışta 5 dakika hızla ayarlanır.



Ön Ayar/ Çalıřma

Isı Koruma/İptal

Basınç düşürüldükten sonra makine otomatik olarak ısı muhafazasına girer ve sağ ekranlarda [b] bir dijital tüp bulunur. Tenceredeki yemek sıcaklığını 60-80 °c'de korur.

Not: Basınç işlevi altındaki "ön pişirme" işlevi, yiyecekleri önceden pişirmek için kullanılabilen hızlı bir pişirme programıdır.



Air Fry Özelliđi

Air Fry kapađını taktığınızda, hava fritözü fonksiyon düđmesi ışığı yanacaktır.

1. Özelliđi Seçin

Bekleme modunda, işlev seçim moduna geçmek için sağdaki hava kızartma işlevi düđmesine veya "Karakteristik İşlev" düđmesine basın ve dijital ekran yanıp söner ve [İlgili İşlevin Pişirmesi] görüntüler; ilgili fonksiyon lambası yanıp söner.

2. Zaman / Sıcaklık Ayarı

Fonksiyon seçimi durumunda, zaman ayarına girmek için "Zaman Ayarı" düđmesine basın; zamanı ayarlamak için "+" veya "-" düđmesine basın ve dijital ekran [İlgili Fonksiyonun Pişirme Süresi]'ni görüntüler;

- Fonksiyon seçimi durumunda, sıcaklık ayarına girmek için "Sıcaklık Ayarı" düđmesine basın; sıcaklığı ayarlamak için "+" veya "-" düđmesine basın ve dijital tüp [İlgili Fonksiyonun Pişirme Sıcaklığı]°C'yi görüntüler ve simge yanar;

- Zaman ayarı: Dijital tüpte [Pişirme Süresi] görüntülenir ve süre, kısa basış başına dakika olarak ayarlanır ve uzun basış başına 5 dakika hızla ayarlanır. İlgili fonksiyon lambası yanıp söner.

- Sıcaklık ayarı: Dijital tüp [Pişirme Sıcaklığı] gösterir ve sıcaklık, kısa basışta 1°C ile ayarlanır ve ° ile hızlı bir şekilde ayarlanır.

Uzun basışınızda ilgili fonksiyon lambası yanıp söner.



3. Çalışma

Fonksiyon seçimi durumunda, çalışmaya başlamak için "Başlat/İptal" düğmesine basın. Dijital tüpte [Kalan Süre] görüntülenir, ilgili fonksiyon lambası normalde yanar, "-" yanıp söner ve "Yaklaşık Kalan Süre" normalde yanar.

Çalışma işlemi sırasında, hava kapağını açın ve [Statik Blok Şeması]'nı görüntülemek için dijital tüp yanıp söner ve ilgili fonksiyon her zaman açıktır. Makine bir duraklama durumuna girer, tencere kapağı tekrar geri takıldıktan sonra geri sayım durur ve çalışmaya devam eder.

Not: Çalışma sırasında kapak kaldırılırsa, kapak tutamağının sıcaklığı çok yüksek olabilir, bu nedenle haşlanmayı önlemeye dikkat edin.



Geri sayımdan sonra, kaptaki sıcaklık 150°C'nin üzerine çıktığında dijital tüp [SOĞUTMA] gösterir. İlgili fonksiyon lambası normalde açıktır. Soğutulduktan sonra, dijital tüp [Son] görüntüler ve ilgili fonksiyon lambası normalde yanar.



Bu noktada pişirme işlemi tamamlanmıştır. Tencere kapağını kaldırabilir ve lezzetli yemeklerin tadını çıkarabilirsiniz.



	Problem	Olası Problem Nedeni	Çözüm
1	Basınç kapağı zor kapanıyor	Sızdırmazlık halkası yerleşmemiş olabilir	Sızdırmazlık halkasını iyice yerleştirin
2	Basınç kapağı zor kapanıyor	Şamandıra deflasyondan sonra düşmez	Tencerede basınç var. Basıncı boşaltın.
3	Basınç kapağı sızdırıyor	Tencerede basınç var	Kapağı açmadan önce basınç ve şamandıra düşene kadar bekleyin
		Tencerede basınç var	Conta halkasının gerektiği gibi yerleştirilip yerleştirilmediğini kontrol edin
		Conta halkası yemek atıkları ile sıkışmış	Conta halkasını temizleyin
		Conta halkası aşınmış	Değişimi için teknik servise gönderin
4	Şamandıra halkasında hava kaçağı var	Şamandıra conta halkası yemek atıkları ile sıkışmış	Şamandıra conta halkasını temizleyin
		Şamandıra conta halkası aşınmış	Değişimi için teknik servise gönderin
5	Şamandıra yükselmüyor	Tencerede çok az yiyecek veya su kalmış olabilir	Gerektiği gibi uygun miktarda yiyecek ve su koyun
		Üst kapakta hava kaçağı veya basınç sınırlaması olabilir	Bakım için satış sonrası servis departmanına gönderin
6	Cihaz açıldığında ekran yanmıyor	Güç soketi zayıf temas ediyor olabilir	Lütfen elektrik prizini kontrol edin
		Sigorta koruyucusu bozuk	Bakım için satış sonrası servis departmanına gönderin
7	Dijital tüp E1'i gösteriyor	Alt sıcaklık sensörü devrede	Bakım için satış sonrası servis departmanına gönderin
8	Dijital tüp E2'yi gösteriyor	Alt sıcaklık sensörü kısa devre yapıyor	Bakım için satış sonrası servis departmanına gönderin

9	Dijital tüp E4'ü gösteriyor	Tepedeki sıcaklık çok yüksek	Elektriđi kestikten sonra sođuması için üst kapađı çıkarın
10	Dijital tüp E7'yi gösteriyor	Kapak çalışma sırasında yerinde deđil	Kapađı düzgün bir şekilde takın
11	Dijital tüp E8'yi gösteriyor	Şebeke voltajı çok yüksek.	Şebeke voltajı sabit olduktan sonra düzelecektir.
12	Dijital tüp E9'u gösteriyor	Şebeke voltajı çok düşük	Şebeke voltajı sabit olduktan sonra düzelecektir.
13	Dijital tüp E11'i gösteriyor	Basınçlı pişirici basınçsız uzun süreli hava kaçađı	Bakım için satış sonrası servis departmanına gönderin
		Havada kızartma-ayarlanan sıcaklığa kadar deđil	Bakım için satış sonrası servis departmanına gönderin
14	Dijital tüp Pot görüntüleri	İç kap yerinde deđil	İç konteyner yerleştirildikten sonra kurtarılabılır

TEMİZLEME VE BAKIM

1. Temizlemeden önce elektrik fişini çekin.
2. Isıtma plakasını yumuşak bir bezle temizleyin.
3. Damlama tepsisini çıkarın ve temizleyin.
4. Kapaktaki lastik contayı, kireç önleyici kapađı, basınç tahliye valfini ve şamandıra valfini temizleyin.
5. İç kabı sünger veya yumuşak bir bezle temizleyin.



